



# ACTIVE DIGITALS MANUAL

## ACTIVE DIGITAL FUNCTIONS



EL BACKLIGHT



100M W/R



ALARM



BATTERY  
(CR2032)



STOPWATCH




CHIME

### ATTENTION

1. Never try to open the case or remove its back cover.
2. Do not operate buttons underwater.
3. Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch.
4. Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
5. Avoid exposing the watch to temperature extremes.
6. Wipe the watch with a dry, soft cloth only. Avoid allowing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
7. Avoid wearing the watch in electromagnetic and static conditions.


## DISPLAY

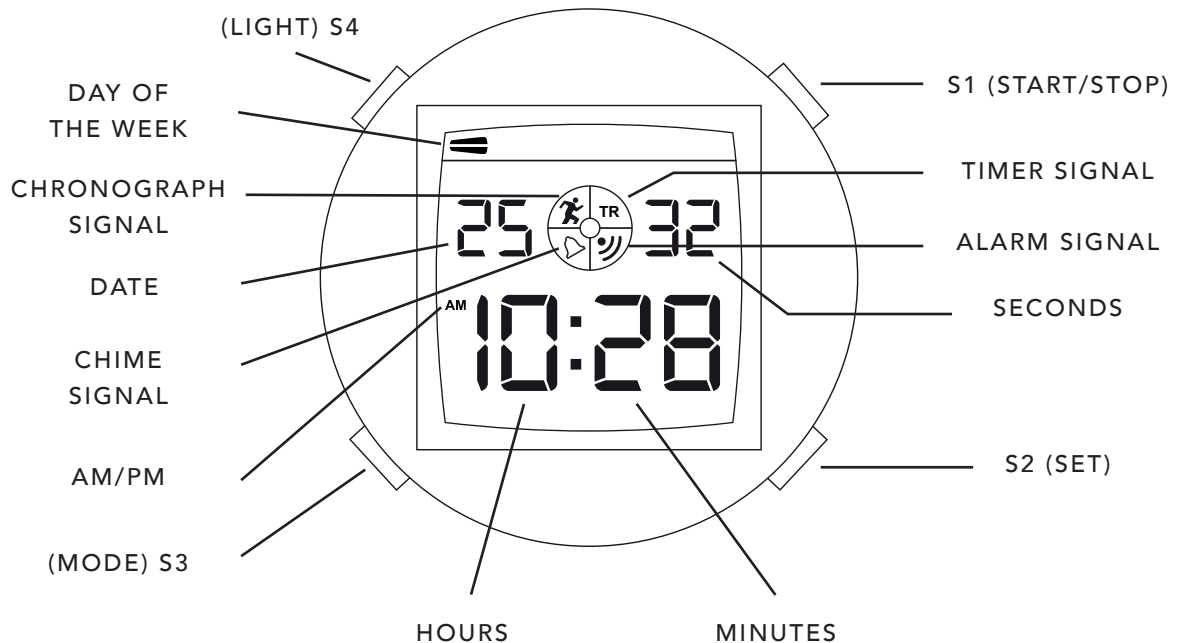


## BUTTON OPERATION

- Hold S1 button, month and date will display.
- EL is turned on for 3 seconds when S4 button is depressed.
- When S1, S2 and S3 buttons are depressed simultaneously, LCD all on, EL on and buzzer on will occur.


## HOW TO CHANGE THE DISPLAY MODE

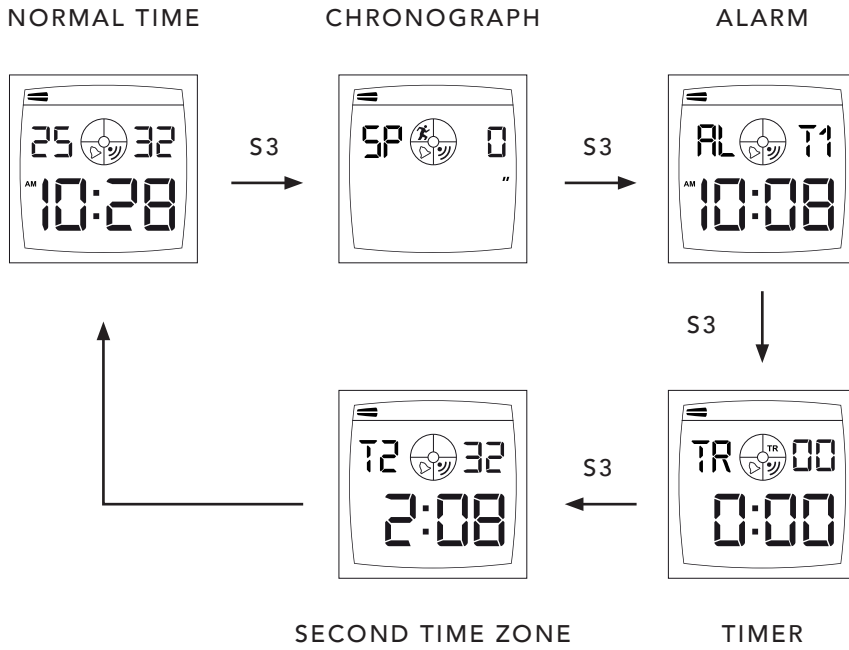


## HOW TO SET NORMAL TIME/CALENDAR

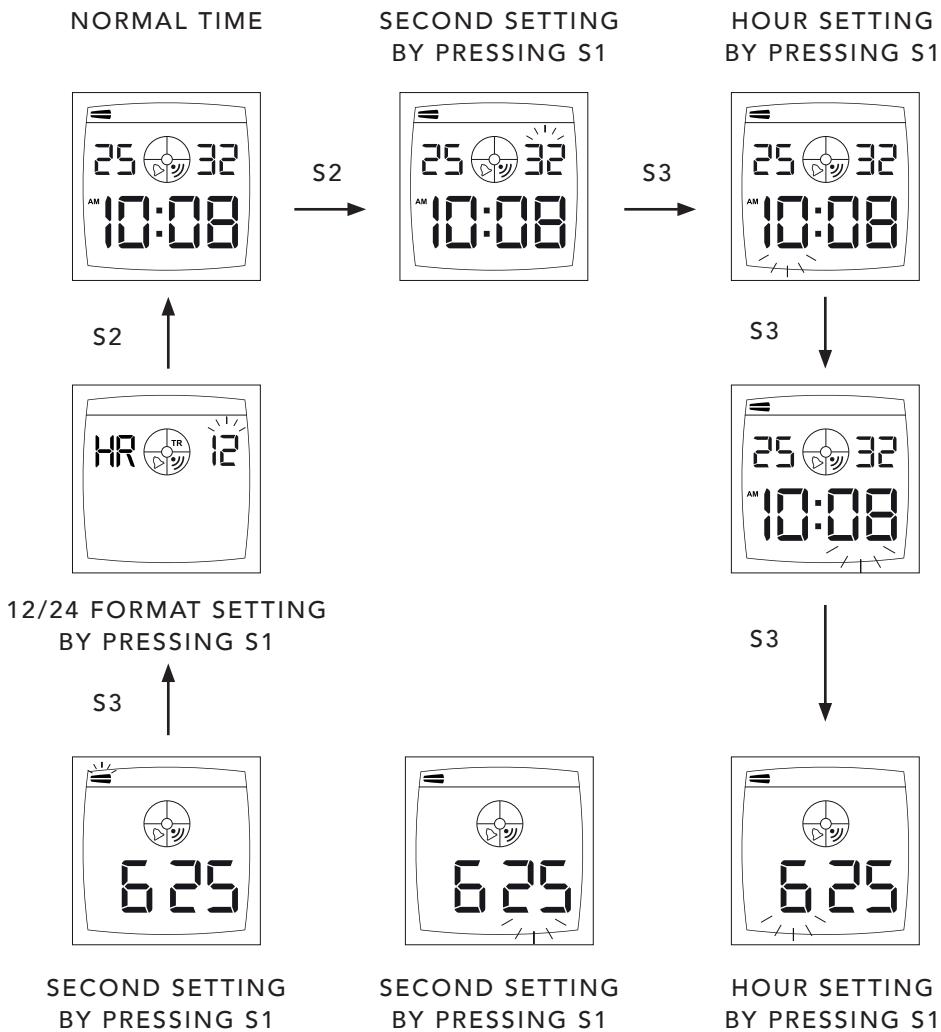


## HOW TO USE THE CHRONOGRAPH

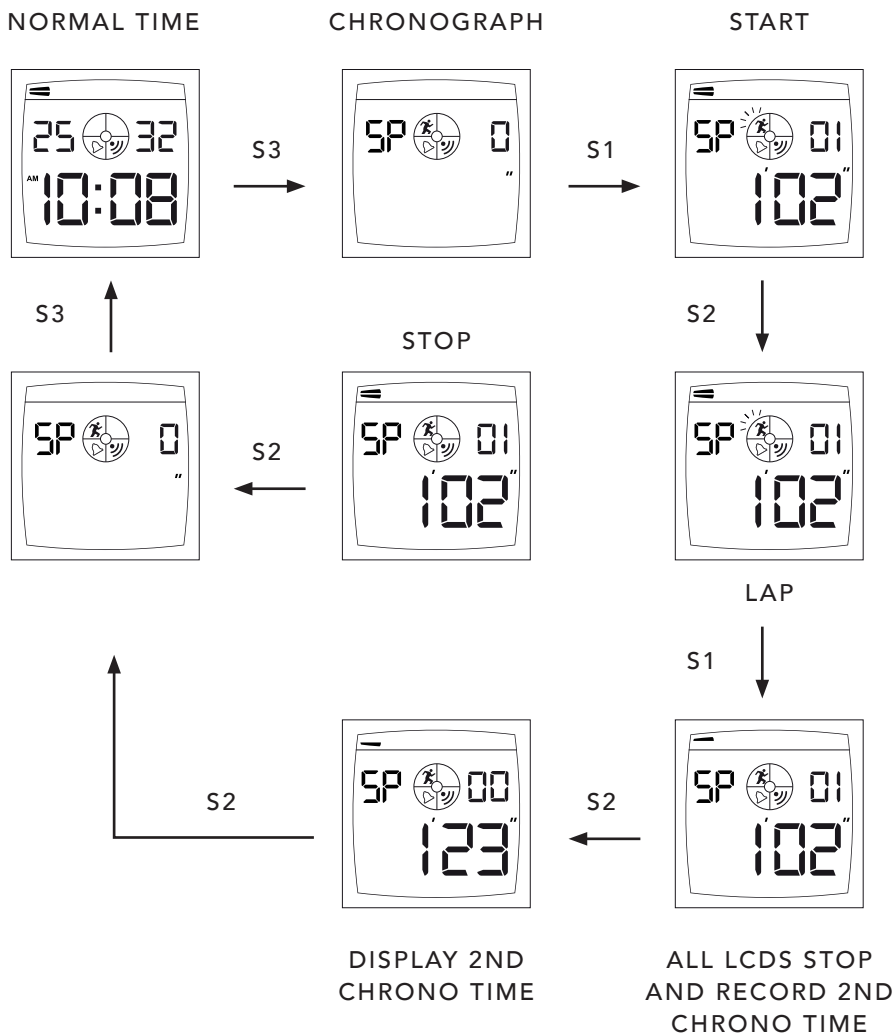


## HOW TO SET ALARM TIME

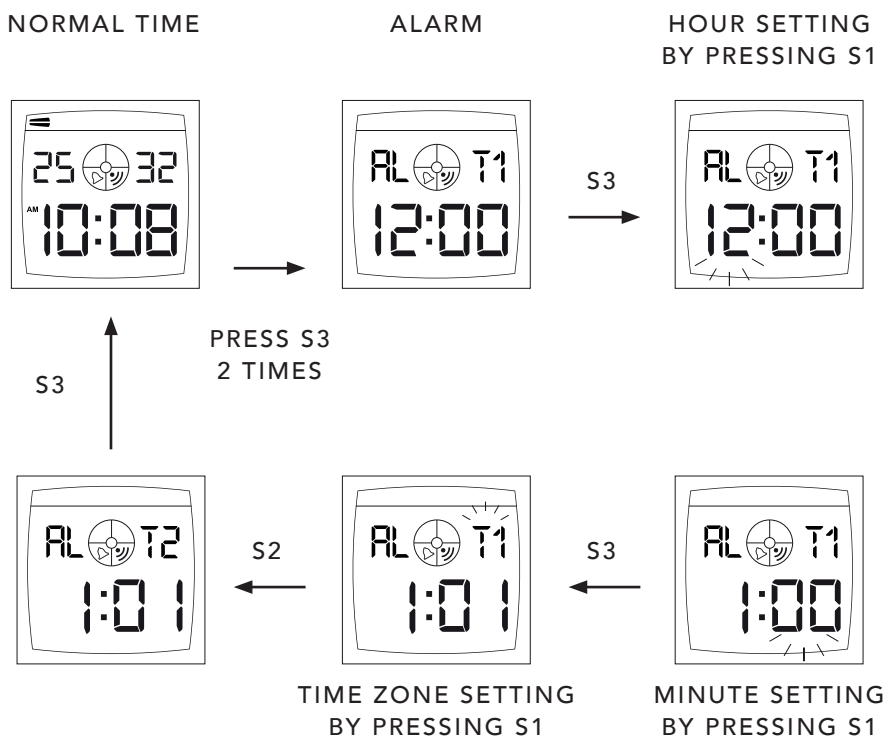

## ALARM & CHIME ON/OFF

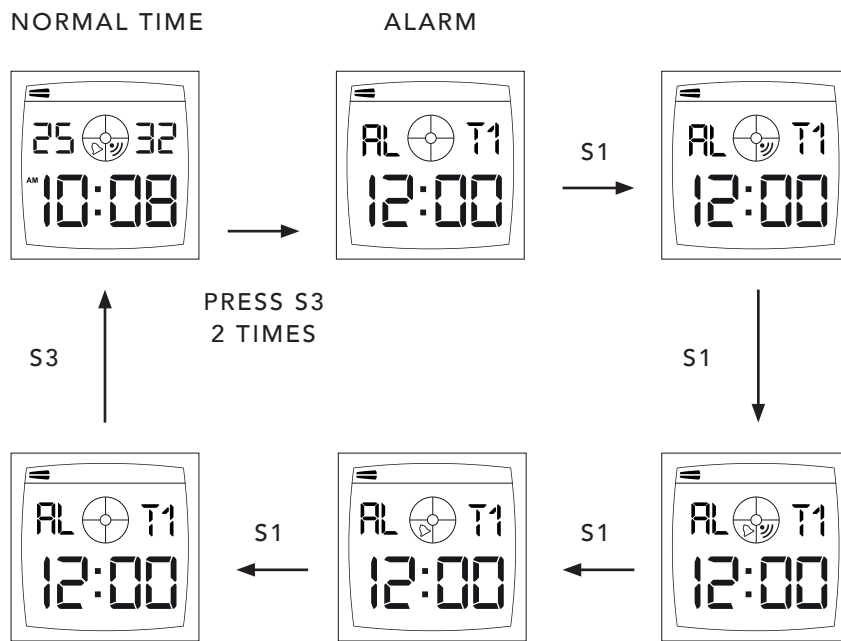

## HOW TO SET SECOND TIME ZONE

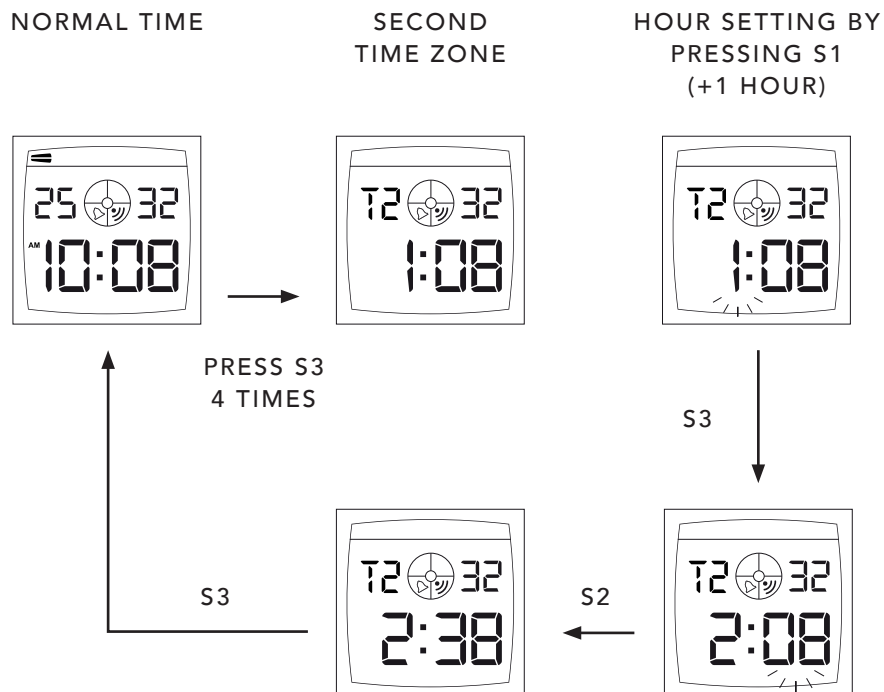


# HOW TO USE TIMER

NORMAL TIME




PRESS S3

3 TIMES

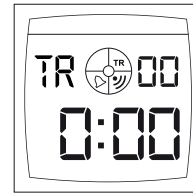


S2

HOUR SETTING BY PRESSING S1

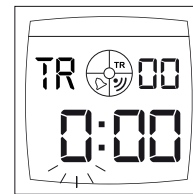


S3

MINUTE SETTING BY PRESSING S1

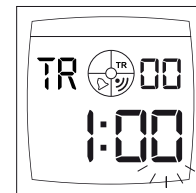

S3

SECOND SETTING BY PRESSING S1


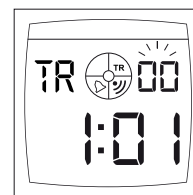


S2

RELOAD TIMER AND SET


S2

S3

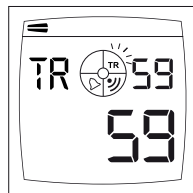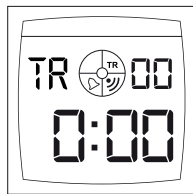

BEGIN TO COUNTDOWN



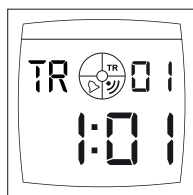



S3





# MISCELLANEOUS DIGITALS MANUAL


## ACTIVE DIGITAL FUNCTIONS

	EL BACKLIGHT		100M W/R		ALARM
	DUAL TIME		STOPWATCH		CHIME
	CALENDAR		COUNTDOWN TIMER		BATTERY (CR2025)
	ANIMATION DOTS				

### ATTENTION

1. Never try to open the case or remove its back cover.
2. Do not operate buttons underwater.
3. Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch.
4. Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
5. Avoid exposing the watch to temperature extremes.
6. Wipe the watch with a dry, soft cloth only. Avoid allowing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
7. Avoid wearing the watch in electromagnetic and static conditions.

## DISPLAY

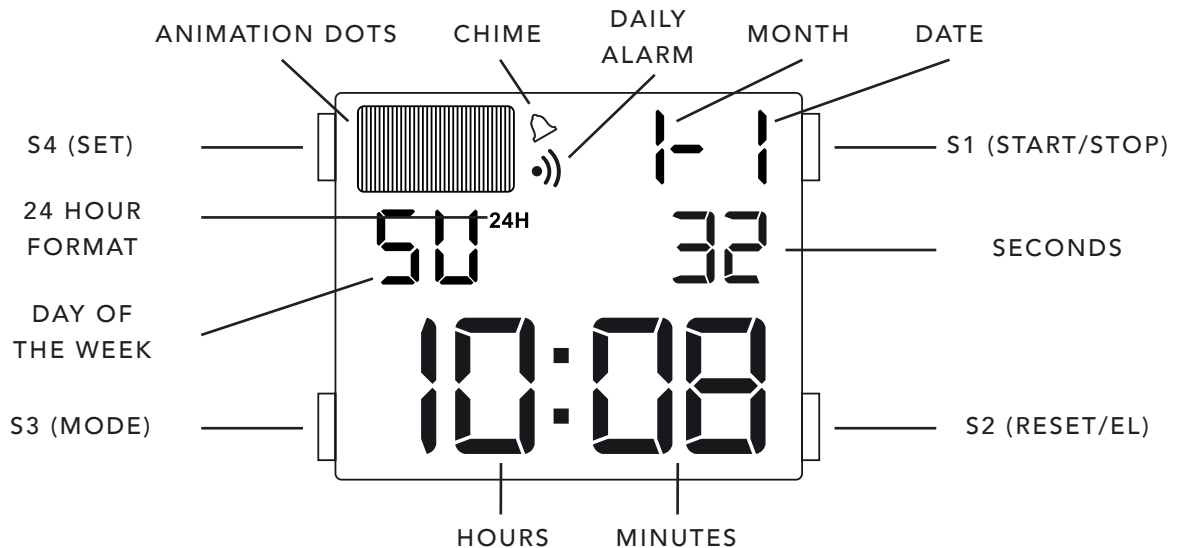


## BUTTON OPERATION


- Animation dots display in 2 fashions
- Press S1 or S2 to switch from fast to slow display scan
- Press any key to switch from slow to fast.




## HOW TO SET NORMAL TIME/CALENDAR

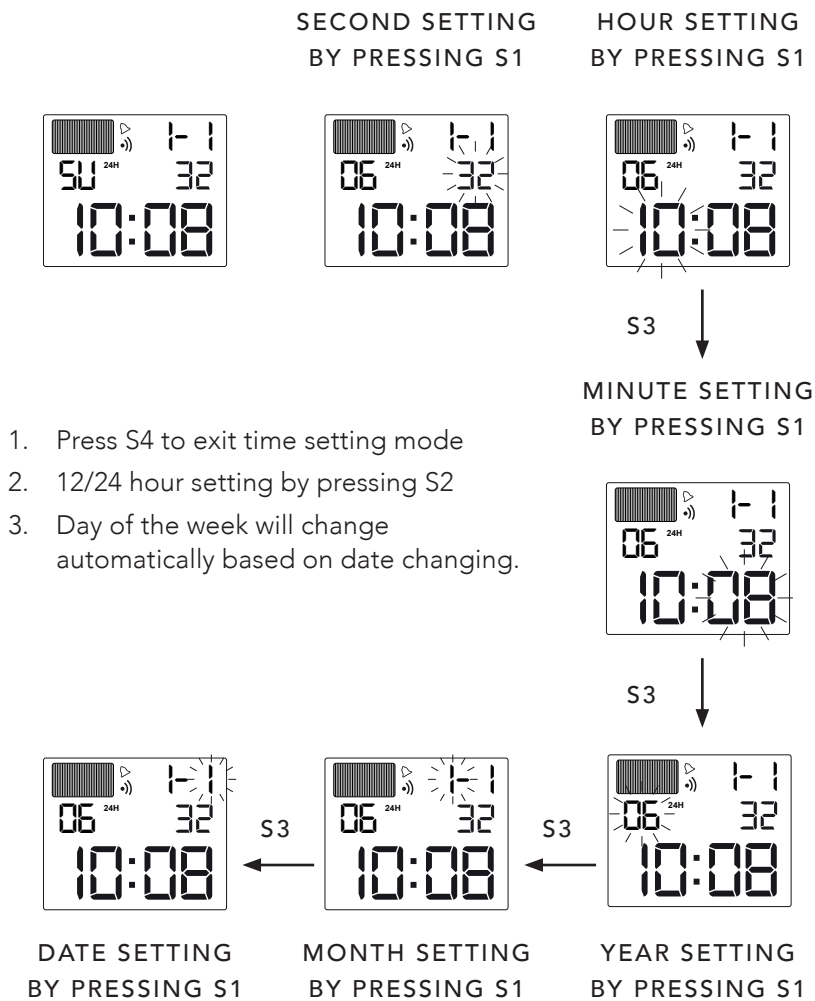


## HOW TO CHANGE THE DISPLAY MODE

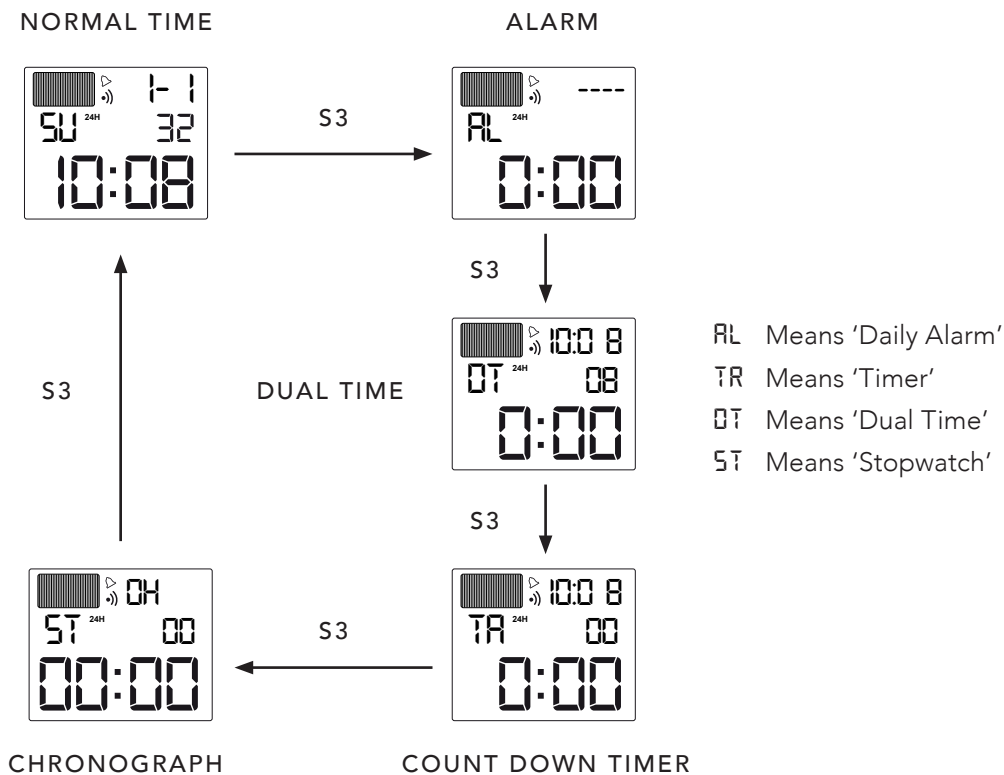

## HOW TO SET ALARM TIME

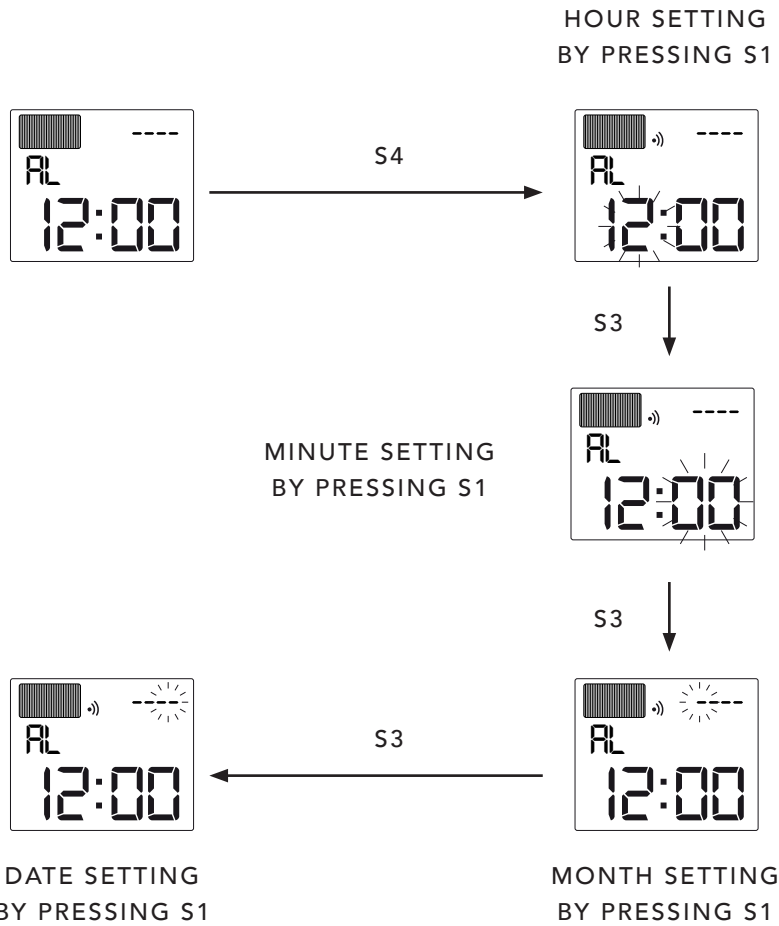

## ALARM & CHIME ON/OFF

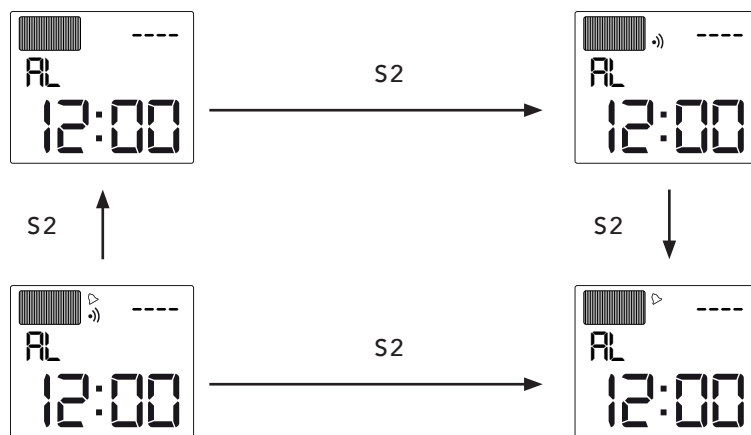


1. Press S4 to exit alarm setting mode
2. Press S3 to return to normal time
3. '----' means daily alarm. If month and date are set, it will alarm once.


## HOW TO SET COUNTDOWN TIMER

SET COUNTDOWN  
TIMER

HOUR SETTING  
BY PRESSING S1

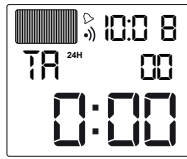


S4

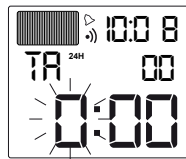

S3



S3

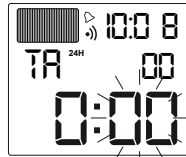


SECOND SETTING  
BY PRESSING S1

MINUTE SETTING  
BY PRESSING S1


Press S4 to exit timer setting mode.

## RUN COUNTDOWN TIMER

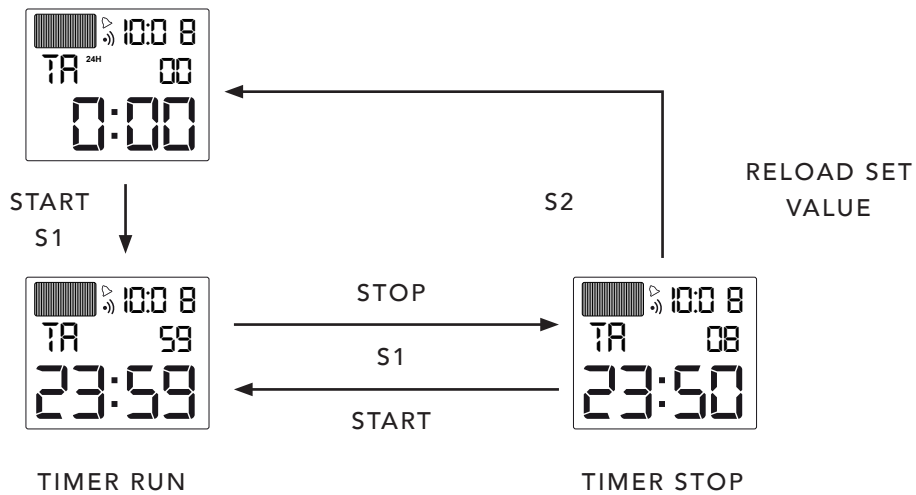


## HOW TO SET SECOND TIME ZONE

### HOUR SETTING BY PRESSING S1

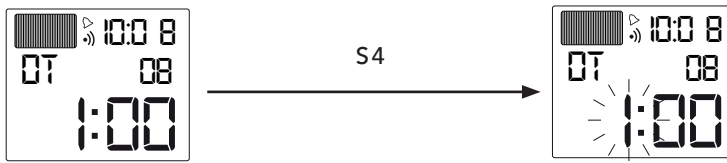


1. Press S4 to exit setting mode
2. Press S3 to return to normal time.

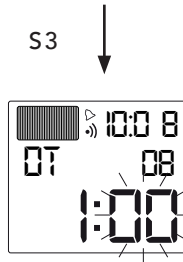

### MINUTE SETTING BY PRESSING S1

## HOW TO USE CHRONOGRAPH

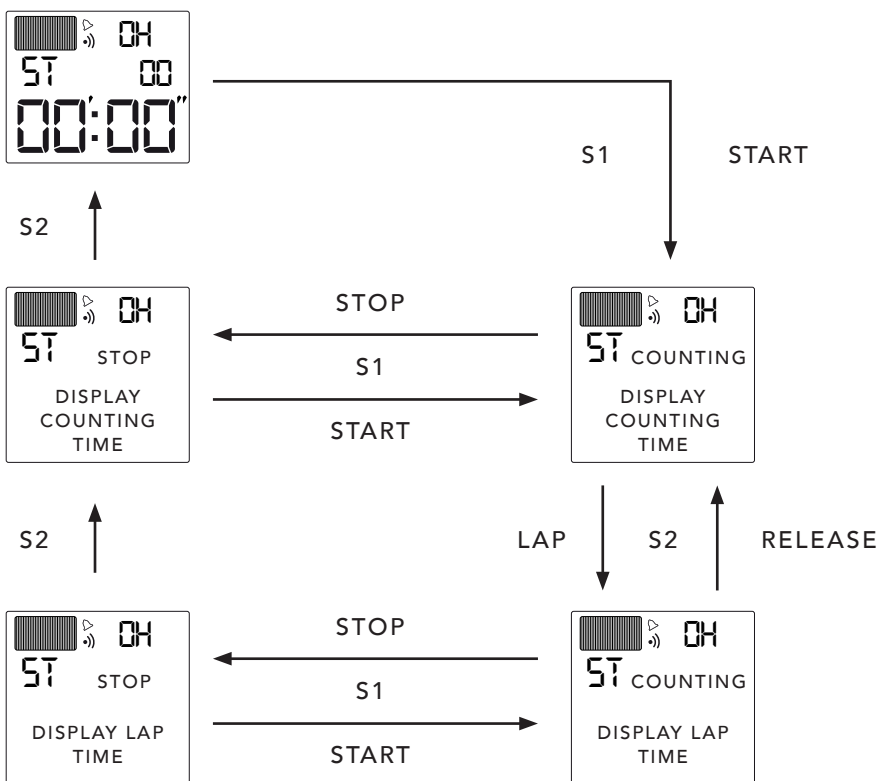

1. Press S3 to return to normal time.